
 SCELAVI


INSTALLATION GUIDE

SPC CLICK · LOOSE LAY · GLUE DOWN · SELF-ADHESIVE


1. SPC CLICK INSTALLATION




Step 1: First plank, first row. Place a spacer of 3/8" (9,525mm) thickness to the left and position the plank against the wall.

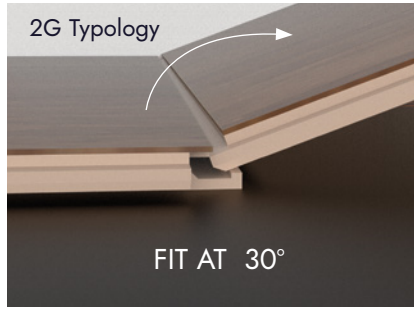

Step 2 / 2G: Second plank, first row. Place this plank gently and tight to the short end of the first one.

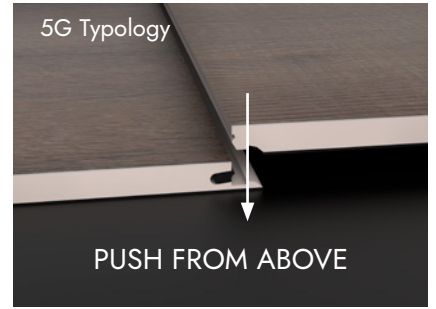

Step 2 / 5G: Second board, first row. Fit gently from above and push down until they are engaged and level.

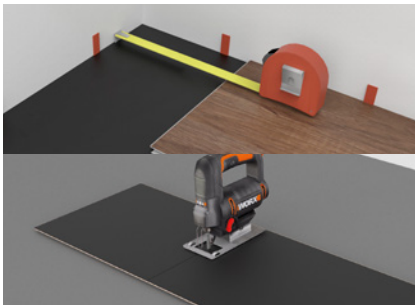

Step 3: Place a 3/8" (9.5 mm) spacer against the wall and measure the last plank to fit. Cut with a jigsaw, hand saw, chop saw, or guillotine cutter. Score and snap the flooring, similar to drywall.




Step 5: Start the second row with a plank at least 10" (254 mm) long. Place a 3/8" (9.5 mm) spacer against the wall and measure the last piece. If it's under 10" (254 mm), use a new starter plank. Insert at an angle into the previous row and tap the long side with a tapping block until flat.




Step 6A - 2G: Holding the first piece at an angle, place the next piece on the short side at a 30° angle without touching the click of the piece in the previous row. Lower it until it is level with the previous piece.



Step 6B - 2G: Once level, move the piece until the 2 pieces are perfectly aligned on the short side.

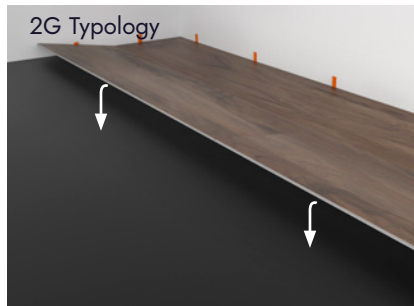

Step 6C - 2G: Lower the 2 assembled pieces at the same time until they are level with the ground.

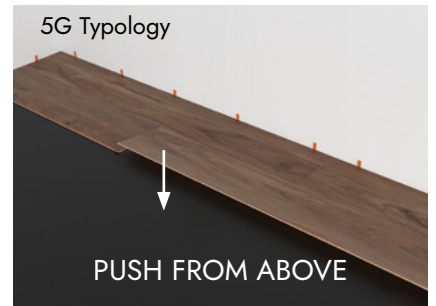

Step 6 - 5G: Fit the second board at 30° on the long side to the previous row and simply push down until you hear a click to fit them together.



Step 7: The product is properly locked when the two boards are flush across the top. Finish installing this plank tapping it with a tapping block on the long side to ensure secure installation.





Step 8: Repeat the operation specific to each typology (2G or 5G) to add more rows until the entire surface of the room is covered.



Step 9: Last row. The Minimum width of the last plank should be NOT LESS than 2" wide. Put a spacer before measuring. Cut the panels lengthwise and glue the short ends.

2. LOOSE LAY INSTALLATION

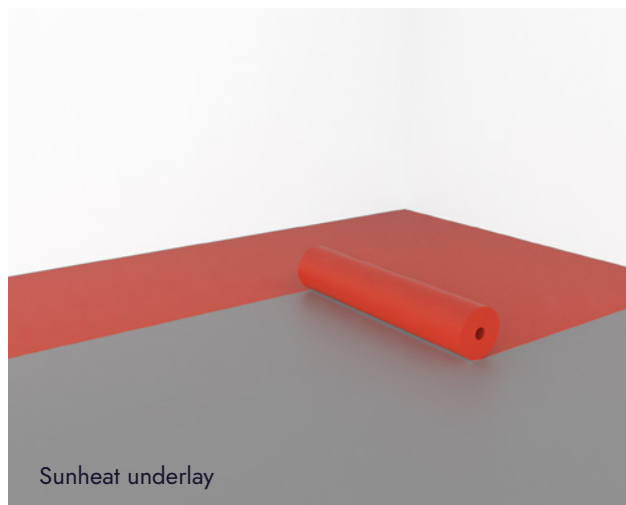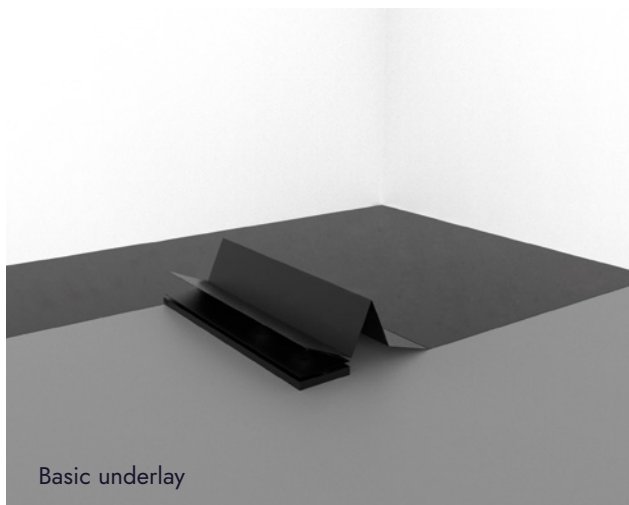


Step 1: Place a basic or sunheat underlay if you have a underfloor heating system.



Step 2: Place the planks without adhesive trying to fit well with each other so they do not come out. If it happens, substitute another plate that fits better.


3. GLUE DOWN INSTALLATION

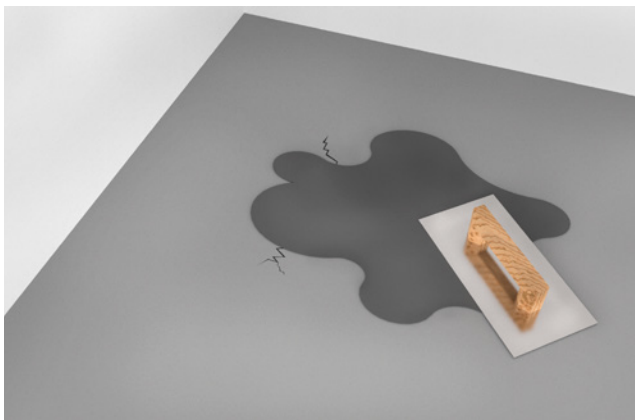

Step 1: The surface on which is installed Scelavi must be cleaned, dried and equalized. If they have imperfections it should be corrected before starting the process.



Step 2: The planks can be applied directly on hard surfaces. Place one or two rows on the floor without applying adhesive to see the result and also check if cuts are needed.

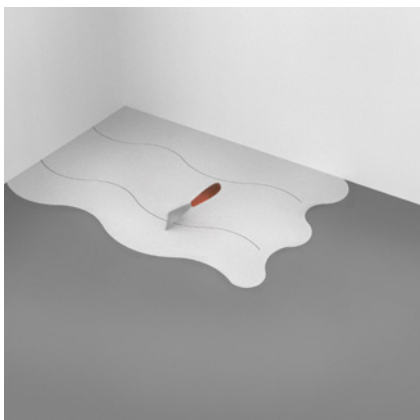

Step 3: Apply glue on the floor with the help of a spatula.



Step 4: Paste the vinyl tiles with care and precision.



Step 5: Exert gentle pressure on all unions with the help of a roller to ensure proper closure fittings.




Step 6: Clean excess glue that may have left the joints. Do not use wax or abrasive materials in cleaning.


4. SELF-ADHESIVE




Step 1: The surface on which is installed Scelavi must be cleaned, dried and equalized. If they have imperfections it should be corrected before starting the process.

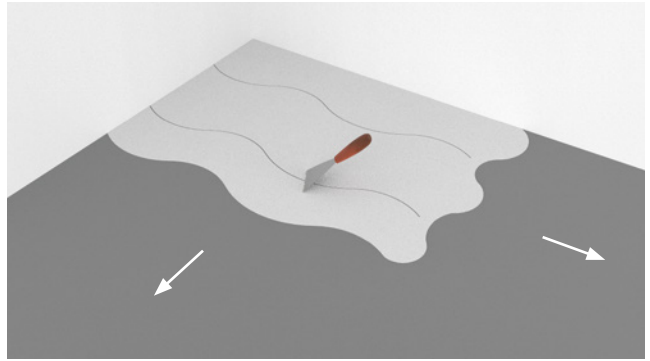


Step 2: If the floor is very porous, it is recommended to apply a sealing primer to improve the adhesion of the tiles.

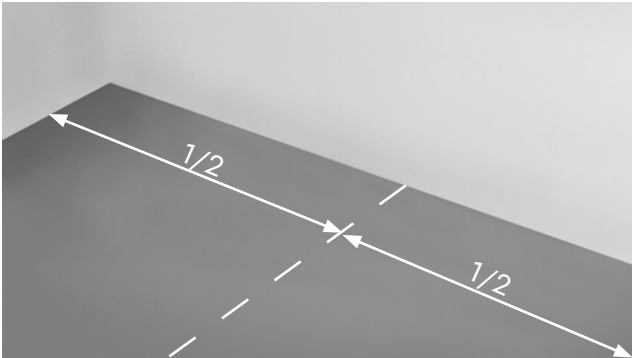

Step 3: Before you begin, mark the center of the room and draw a straight guide line.

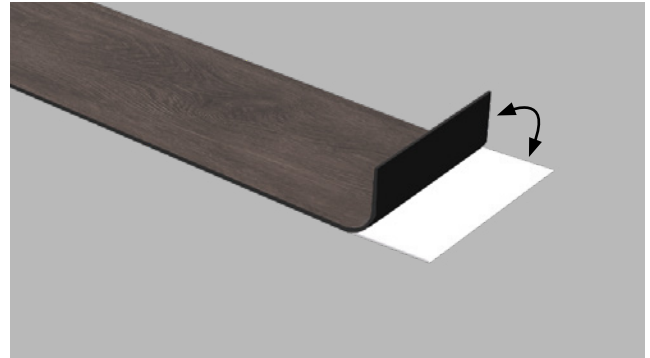


Step 4: Carefully peel off the backing paper without touching the adhesive too much.

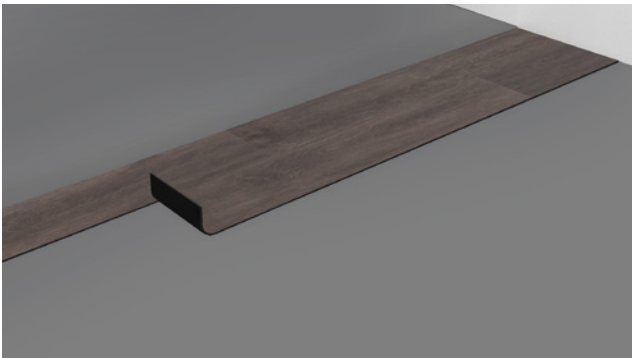

Step 5: Place the piece along the previously marked guide line. Press firmly from the center toward the edges to prevent bubbles from forming.



Step 6: Use a manual roller to ensure adhesion of the piece and complete removal of bubbles.

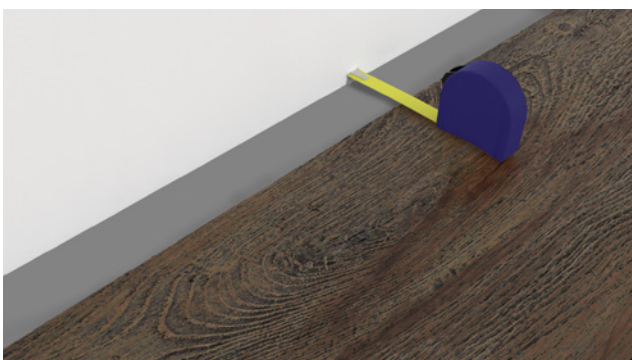

Step 7: For complex areas or where cutting is required, first measure the space to be filled. Transfer the measurements to the tile and cut it with a utility knife. Then install it following the same process used for the rest.



scelavi.com
